

PO Box 50, Hornsby, NSW 2077


Phone: 1800 643 853 Web: www.bobcat.com.au

RISK ASSESSMENT

For

Bobcat Excavator

Models 430 & 435

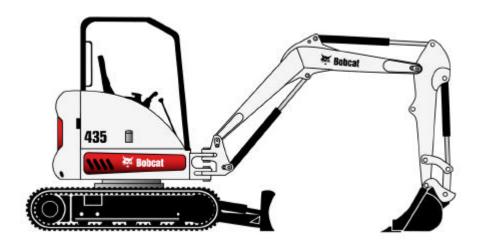



CONTENTS

Applicability

Standards referenced in the preparation of this document

Risk Assessment sheets

APPLICABILITY

The following Risk Assessment document is applicable to the Bobcat Zero House Swing Excavator models 430 & 435

STANDARDS REFERENCED

The following Standards, Acts and Regulations were referenced in the preparation of this Risk Assessment.

- NOHSC: 1010 (1994) National Standard for Plant
- OHS Act 2000
- OHS Regulation 2001
- AS2359.6 (1995) Powered Industrial Trucks Safety Code
- AS4360 (1999) Risk Management
- ISO/WD 3691-1 (1999) Industrial Trucks Safety Requirements and Verification
- EN1459 (1999) Safety of Industrial Trucks

Hazard Identification	Risk Assessment	Control of Risk
design is well suited for operation in confined workplaces where operation reach and manoeuvrability are	Bobcat Excavator and when operated correctly by a trained and certified driver. Risk can be high, causing both injury and death to operator or bystander, if the Excavator is operated contrary to the safety instructions provided, careful assessment of the workplace has not been carried out and unapproved attachments are used. Serious risk to bystanders is possible when the Excavator is working in congested areas	TOPS protection for the operator. A seat belt, and emergency exit is provided. A plastic Operator's Handbook is fastened within the operator compartment, containing brief, essential instructions and warnings for safe operation. The Operator Handbook refers to the need to read, and
b Actual and intended use in the work place; The Bobcat Excavator is a compact multipurpose machine, with the capability of being configured for a variety of different tasks via the application of an appropriate approved attachment. Refer to 'a' above, and 'q'	Refer to 'a' above, and 'q'.	Refer to 'a' above, and 'q'.

c Environmental condition and terrain in which the Bobcat Excavator is used. Darkness causing poor		Refer to 'a' above. Excavator is equipped with front work lights; ROPS /TOPS provides good visibility in poor
visibility, sloping ground, wet and soft or muddy surface can lead to roll over or tipping. Work areas containing explosive gases, flammable materials, poor ventilation, underground cables or pipes,		light conditions. Motion alarms can be fitted for confined work ares. Operator Handbook and Manual provide instruction on how to work on sloping ground.
prohibited work areas, and overhead electrical wires are to be avoided		The operator must comply with safety stipulations, if necessary by special instructions adapted to the local conditions of use. Handbook and Manual provide
		instruction on dangerous work areas. An exhaust spark arrester is fitted.
d Foreseeable abnormal situations, misuse and fluctuation of operating condition. Varying degrees of above can cause accidents.		It is essential that the operator be trained, be certified, experienced in the operation of the Bobcat Excavator and comply with the constructor's instruction concerning the use, maintenance, repair, assembly and transport in the Operators Manual, before attempting abnormal or difficult tasks
e Potential for injury due to entanglement, crushing, trapping, cutting, stabbing, puncturing shearing, abrasion, tearing and stretching. The above hazards are present if the Bobcat Excavator is operated or worked on, contrary to instructions within the Operators Manual, or in an unsafe manner, Hazards are present in the changing of attachments and care must be taken in entering and leaving the machine.	correctly. Very high risk, potential of serious injury, possibly death if used contrary to instructions, Exiting the cabin with the engine running or the attachment raised, or attempt	Operation and maintenance must be carried out only in accordance with the Operation and Maintenance Manual, which contains many warnings and instruction on how to avoid most hazards. Warning and instruction decals of a pictorial design are fitted to the Bobcat Excavator

f Generation of hazardous	The risk level is very low when	
conditions, due to	instruction within the Operation	
pressurised content,		maintenance including
electricity, noise, radiation		hazards regarding pressurised
friction, vibration, fire,	must not be disengaged during	
explosion, temperature	operation and should be	radiator water, noise,
moisture, vapour, gases,	checked before each shift.	electricity, fire, explosion,
dust, ice, hot or cold parts.		temperature, exhaust gases,
Hazards are present with		dust and hot parts together
regard to most of the above.		with warnings and warning
		decals.
		An exhaust spark arrester is fitted.
		The seat belt must always be fitted snugly, wear protective
		clothing during operation.
		Avoid wearing rings, scarves
		or open jackets. For certain
		works, it may be necessary to
		wear protective eyewear,
		hearing protection, safety
		boots, hard hats and protective
		gloves.
g Failure of the Bobcat	Low	Operator handbook and
Excavator resulting in the		Manual warns the operator to
loss of load, unintended		operate the machine within the
ejection of work pieces,		rated operation load as set on
explosion fragmentation or		the attached decal and within
collapse of parts.		the operation manual.
The above are not considered		Be alert at all times.
hazardous		
•	Safe to carry out operations as	
Excavator to lift and move		and instruction. Refer to
people, equipment and	maintenance manual	operation Manual and decals
materials The Bobcat		on the machine. Load charts
Excavator is design for		are secured in the operator's
excavation of materials,		cabin and must be adhered to
material handling and loading.		reduce the risk of tipping the
i Control avatama includina	No riok idoptifical	machine.
i Control systems, including guarding and	INO TISK IGENUTIEG	
communication systems.		
No apparent hazards		
J Potential for falling objects	High Risk with improper	Refer to 'a' above
and the plant to roll over	operation	Drivers cab structure meets
The danger of the above is	Very low risk when operated	International Standards for
present	correctly.	ROPS and TOP'S. A FOP'S
	1 1	kit is available and can be
		fitted if necessary. The
		, -

		machine must not be operated without the cabin /canopy or with a damaged cabin/canopy.
k Suitability of materials for the plant No apparent hazards, provided proper inspection and maintenance instructions are followed		Refer to Operation and Maintenance Manual, & inspections for any cracks, damaged components and worn pins etc.
I Suitability of all accessories There are many accessories approved for use with the Bobcat Excavator. Hazards may exist, dependant on how they are used	on whether used incorrectly or according to the respective	Control is made by guarding where possible, decals fixed to the accessory, and Operators Manual, which contain instruction on proper use of the approved attachment or accessory, with appropriate warnings.
m Ergonomic needs relating to installation and use. The cabin meets international ergonomic standards Hazards exist if the operator is suffering from drugs, alcohol, in poor health, has disabilities or is not alert. Cabin / canopy seating and controls are well suited for those who have reasonable strength and fitness.	of normal physique, health and strength. Disabilities may be aggravated due to unavoidable jolting when working in rough ground conditions.	position is comfortable with
n Carrying out the work without the Excavator. No hazard provided the substitute equipment is safe etc for the task.	replacement equipment is safe and operated safely	Instructions for safe operation of the alternate equipment must be studied and operated correctly.
and the impact on workplace		

p Suitability and stability of the plant and supports. Hazards exist in very poor workplaces, especially if ground surface is soft or severely sloping q Presence of persons and	Risk can be high if work site is slopping dangerously, travelling too fast, to close to edges of crevasses, pits, tips and embankments. Instructions in Manual must be followed,	The Bobcat Excavator meets International stability and are suitable for the normal working loads and operating surfaces. Instructions in Manual must be followed. Motion alarm and rotating
other plant in the vicinity Collisions with persons and plant is possible	reasonably alert.	beacon are an option. Instructions spell out need for operator to be alert and not to operate excavator and attachments near bystanders especially when inexperienced or learning. A horn is also fitted Design of cabin /canopy provides good visibility.
r Potential for inadvertent movement or operation of the plant Hazards do not exist when the instructions are followed.	No risk when instructions are followed.	Instructions in the manuals advise on correct gripping of control lever. Instructions also cover requirements of operator before leaving the excavator.
s Systems of work associated with the plant. Not aware of hazards		The operator requires understanding and conforming to operation maintenance manual instruction.
t Access and egress. No hazards when instructions are followed. Hazard exist due to slipping or falling if care is not used, and instructions are not follow when entering or leaving cabin	followed	Instructions in Handbook and Manual also include photo and decal. Machine is fitted with grab handles on each side of cabin. Warning not to jump. Appropriate safety boots and clothing should be worn.
u Competency of operators Hazards are extreme if the operator is not certified, has not been trained in the use of the excavator, are not fit, or are under the influence of alcohol or drugs.	Risk is low if the operator has been trained and is certified, however the operator must be fit, have studied the manuals and have some familiarisation with the excavator.	Certified operators require the additional instructions, which are comprehensively covered in the Operator's Handbook and Operation and Maintenance Manual. Operators are warned that they need to be fit, not have any disabilities that may adversely effect their competent working of the Bobcat Excavator or be aggravated by the movement of the excavator especially

when operating in construction or rough conditions.
Operator must be familiar with the rated load of the Bobcat
Excavator, the capacity of
attachments being used, and the weight of the material
being handled. Refer to 'm'.